



RCA Small Wonders Camcorder CC176

Viewfinder Replacement

Step by step instructions directing the users how to replace a faulty viewfinder on an RCA Small Wonders Camcorder cc176

Written By: Allison Baudoin



INTRODUCTION

RCA Small Wonders Camcorder cc176


May 1993

Step 1 — Viewfinder





- Remove the 5 screw securing the control panel on the top of the device.
- Use a small flathead screwdriver to loosen the panel from the device until you are able to remove it.

Step 2

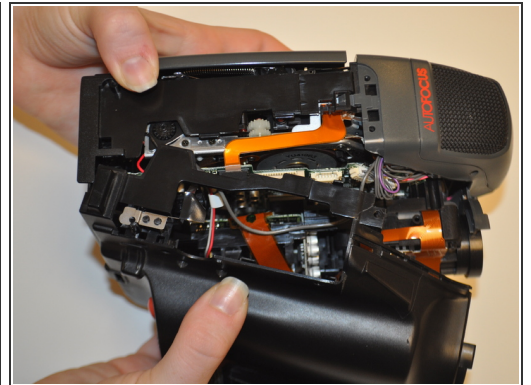

- Remove the remaining 21 screws on the device.
- Begin separating the plastic casing from the inner components of the device.

Step 3

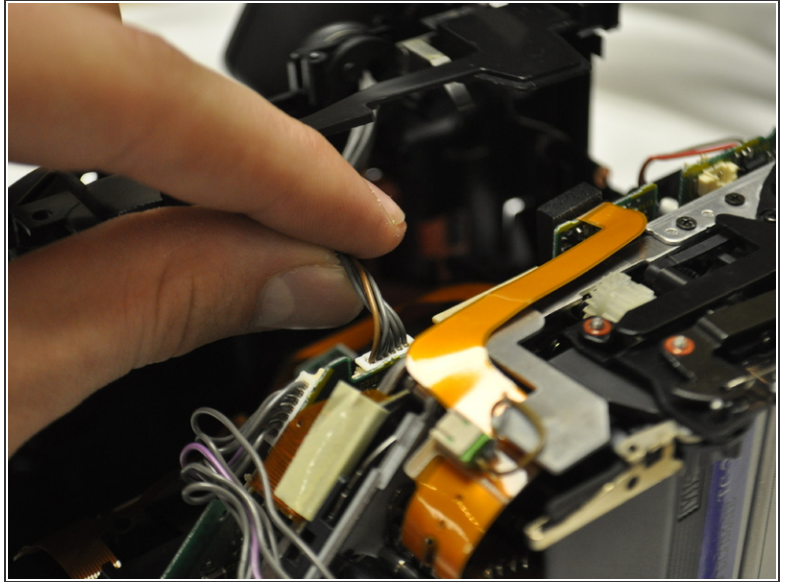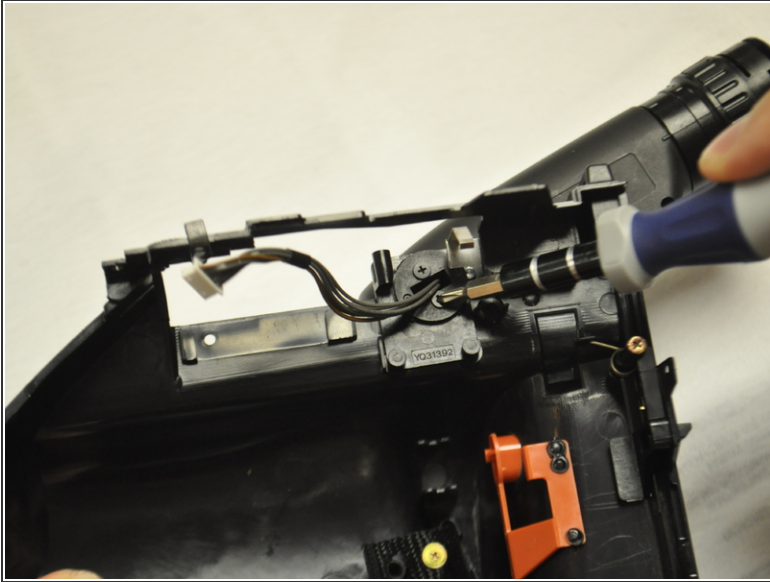

- Grasp the viewfinder in hand, and carefully remove the two screws securing the mounting device.
- Locate the gray electrical cord connecting the viewfinder to the inner component of the camera and gently unplug the gray cord and loosen the viewfinder from the device.

Step 4



- Separate the viewfinder from the plastic the device, feeding the gray cord through the hole in the plastic casing.

To reassemble your device, follow these instructions in reverse order.